CARBON INFRARED HEATER CH1200 LT

User's Manual



- Thank you for purchasing Veito Carbon Infrared Heater. Please read the instructions thoroughly before using your heater.
 After reading the instructions, please keep it in a place accessible to all users.
 Ensure you read 'Safety Precautions' in advence and use the product corectly.
 We can not be liable for any damages caused by failure to observe these instructions.
 The product is specified for use with a power supply of 230V 50/60Hz
 This manual includes the product warrantly.

- This manual includes the product warrantly.
 Specifications and contents of this manual may be changed without prior notice, in accordance with our commitment to product quality, design and control.

CONTENTS

Safety Precautions Precautions for installation and before use •Precautions for install •How to install *How to use power.	7 7 7
How to use power Configuration and name Main body Indication and operation part Operation and stop How to diagnose safety device	8 8 8 9
 Cleaning and maintenance Storage Instructions Troubleshooting Wiring diagram Specification Product warranty 	9 10 10

Safety Precautions

These precautions are designed for keeping users safe and preventing material damage. Be sure to read them and use the product correctly.

• There are 3 classifications of safety precautions and they are listed in the box below.



Possiblity of death or severe injury in the event of mishandling.

 


Possiblity of death or severe injury in the event of mishandling.



Possiblity of injury and/or material damage in the event of mishandling.

*Meaning of picture signs





Indicate contents that people must carry out




*After reading this, be sure to keep it at a place where other users can refer to it at any time.






*After reading this, be sure to keep it at a place where other users can refer to it at any time.

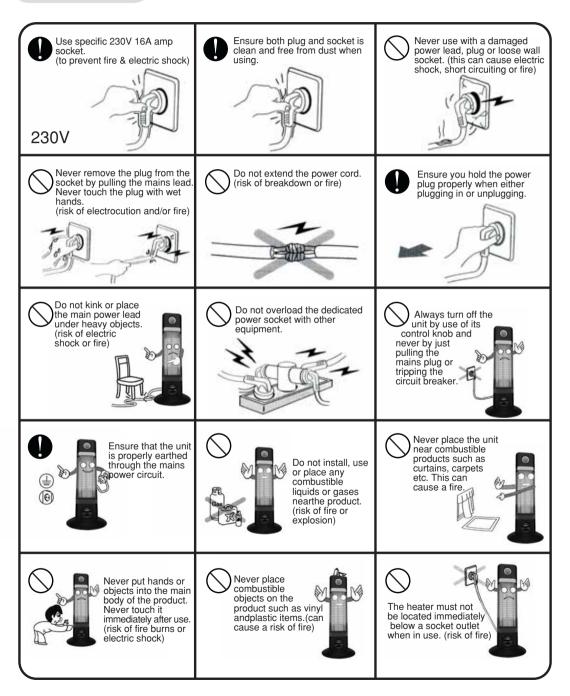




*After reading this, be sure to keep it at a place where other users can refer to it at any time.

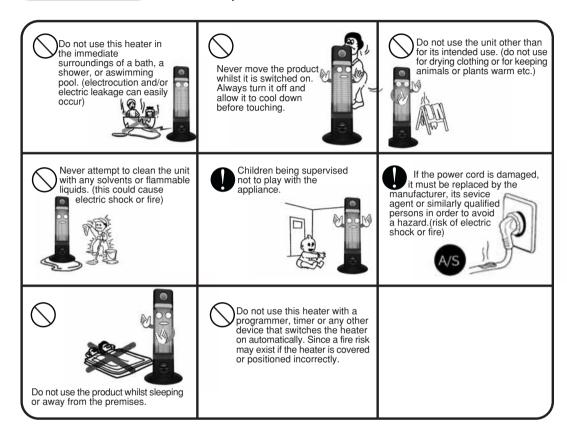




*After reading this, be sure to keep it at a place where other users can refer to it at any time.

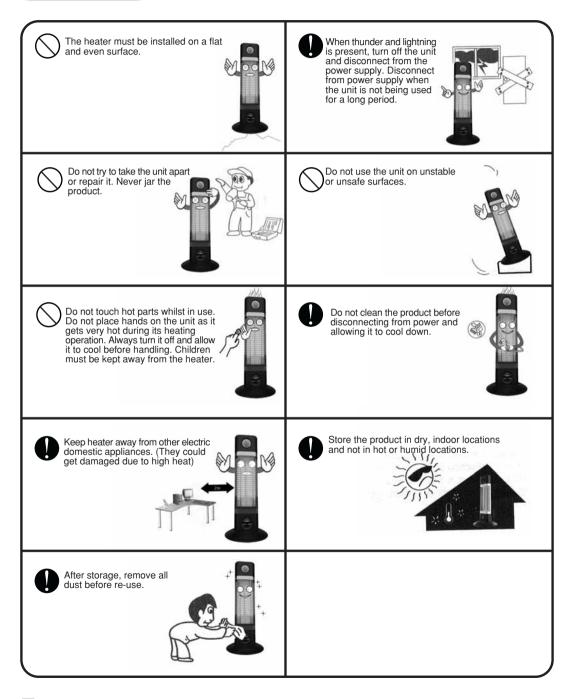

Precautions for installation and before use

PRECAUTIONS FOR INSTALI

*After reading this, be sure to keep it at a place where other users can refer to it at any time.

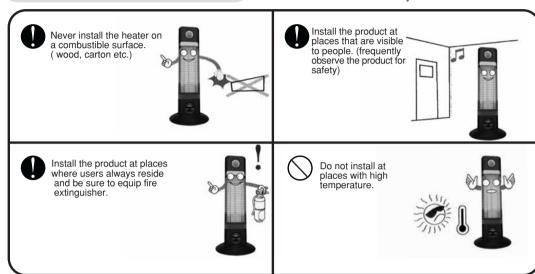

HOW TO INSTALL

*Keep packaking parts because they are necessary in maintaining the heater for a long time.

 
•Assemble the stand with the heater.



• Secure the stand to the heater by using the connection screws supplied.



•Always leave a clear space of at least 0.5m from the left and right of the unit. The unit must also have at least 1.8m clear space above it. Never put any obstacles nearer than 1.8m to the front of the unit.



- •Use the unit in places with easy eccess to power sockets and that are well ventilated.
- •Never use connecting terminals in the power lead. Always directly connect the unit to the power.




HOW TO USE POWER

• When using 230V •Put plug into specific outlet for 230V with earth terminal.



Configuration and Name

MAIN BODY

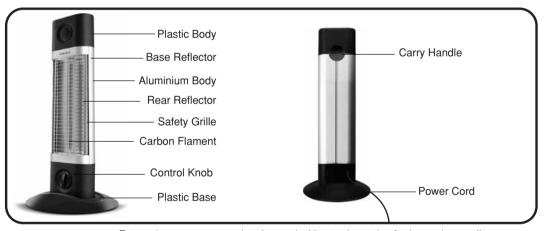

•External appearence can be changed without prior notice for improving quality.

 
INDICATION AND OPERATION PART

OPERATION AND STOP

The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.


- 1. Start operation by using Control Cnob switch.
- 2. Heater is turned on and operation is started.
- 3. Use Control Cnob switch to stop.





How to Diagnose Safety Device

Veito heater is equippped with diverse safety device, preventing a risk of fire. In the event that heater is not working properly, safety device is operated and heater is automatically stopped.

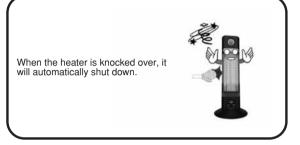


Cleaning and Maintenance

Precautions for examination and handling;

- Handle heater when it is completely cooled down and power is cut off.
- If the heater has collected dust or dirt inside the unit or around the elements, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
- Do not attempt to open the case of the heater at any time, there are no customer serviceable parts inside.
 Do not use powerful abrasive or solvent cleaning fluids when cleaning the heater as they may damage the plastic parts. Use only a clean, dry cloth to clean the external surfaces of the heater only.

 Storage and Instructions





This heater was manufactured conscientiously and checked several times before delivery.


If you experience a malfunction, please try to rectify the fault yourself first with the help of this table. In doing do, you will avoid the unnecessary expense of customer service assistance.

If a foult in your heater can not be rectified with the aid of this table, please contact the Central Customer Service Department.

Repairs must only be carried out by authorized professionals.

	Syptoms	How to deal with	
Unit is not working	Is electric supply working?Check that the power plug is plugged in.Is the circuit breaker off?	Check the main power supply is working. Turn on the product once again after plugging in. Reset circuit breaker.	

Wiring Diagram

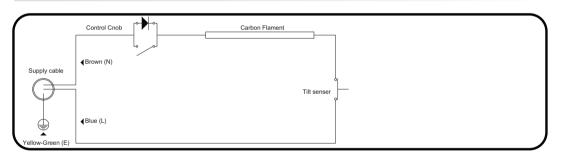

Specification

classification	CH1200 LT
Heating Capacity BTU/h	6000
Maximum Power (W)	1200
Space for use (m²)	15
Power supply	AC 230V 50/60Hz
Size(mm) (WxLxH)	300x300x700
Product weight (kg)	2.0
Controlling method	Level Control
Controlling function	2 Levels

WARRANTY

(Applicable to first retail purchaser only)

Veito Carbon Infrared Heater give more reliable performance, comfort and durability the more they are used. They are built under a strict quality assurance regime which includes inspection both during and after production and exhaustive reliability testing.

In the unlikely event you have any problems, please contact your dealer or distributor. If the problem is as a result of a production fault or failure, repairs will be undertaken free of charge during the period of warranty subject to the following warranty conditions:

- 1. The warranty period is 12 months from the date of first purchase.
- 2. If the problem has been caused by customer error or misuse, abuse or damage, then all repairs will be charged for.
- 3. This warranty card is valid within your country.
- 4. Proof and date of purchase must be supplied.
- 5. Please complete the details below and keep this warranty in a safe place.
- 6.All transport charges back to the dealer are at the customers cost. Keep all original packaging to facilitate return. Return to customer will be at dealers cost (if genuine warranty claim).

DESCRIPTION		CARBON INFRARED HEATER			
MODEL			CH1200 LT		
DATE OF PURCHASE		PRODUCT SERIAL NO:			
Warranty Period		() Months			
DISTRIBUTOR	Nar	me of Company			
	Tel	ephone No.			
		Name:			
CUSTOMER DETAILS		Address:			
		Telephone:			

Notes

Notes

www.veito.com