 
veito **CARBON INFRARED HEATER** CH1200 RT

User's Manual veito 3 111

DESCRIPTION OF USE

- Thank you for purchasing Veito Carbon Infrared Heater. Please read the instructions thoroughly before using your heater.

- After reading the instructions, please keep it in a place accessible to all users.
 Ensure you read 'Safety Precautions' in advence and use the product corectly.
 We can not be liable for any damages caused by failure to observe these instructions.
 The product is specified for use with a power supply of 230V 50/60Hz
 This manual includes the product warrantly.
 Specifications and contents of this manual may be changed without prior notice, in accentral and contents of the product quality. accordance with our commitment to product quality, design and control.




2

CONTENTS

	•
Safety Precautions	
Precautions for installation and before use	. 7
Precautions for install	
•How to install	7
•How to use power	. 8
Configuration and name	
•Main body	. 8
Indication and operation part	. 8
•Remote control	. 9
•How to operate the remote control	
How to use	. 9
•Operation and stop	. 9
Heat amount control	. 9
•Off timer	. 9
How to diagnose safety device	. 10
Cleaning and maintenance	. 10
Storage Instructions	- 10
Troubleshooting	. 11
Wiring diagram	. 11
Specification	. 11
Product warranty	. 12
·	

Safety Precautions

These precautions are designed for keeping users safe and preventing material damage. Be sure to read them and use the product correctly. • There are 3 classifications of safety precautions and they are listed in the box below.

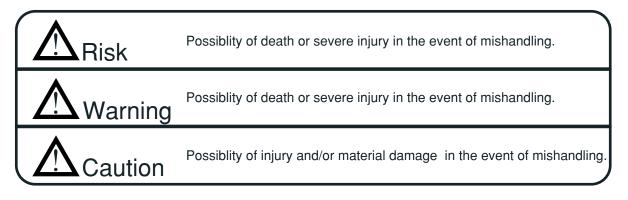

*Meaning of picture signs

Indicate prohibition



Indicate contents that people must carry out

ARisk


*After reading this, be sure to keep it at a place where other users can refer to it at any time.




3

PRECAUTIONS

M WARNING *After reading this, be sure to keep it at a place where other users can refer to it at any time.

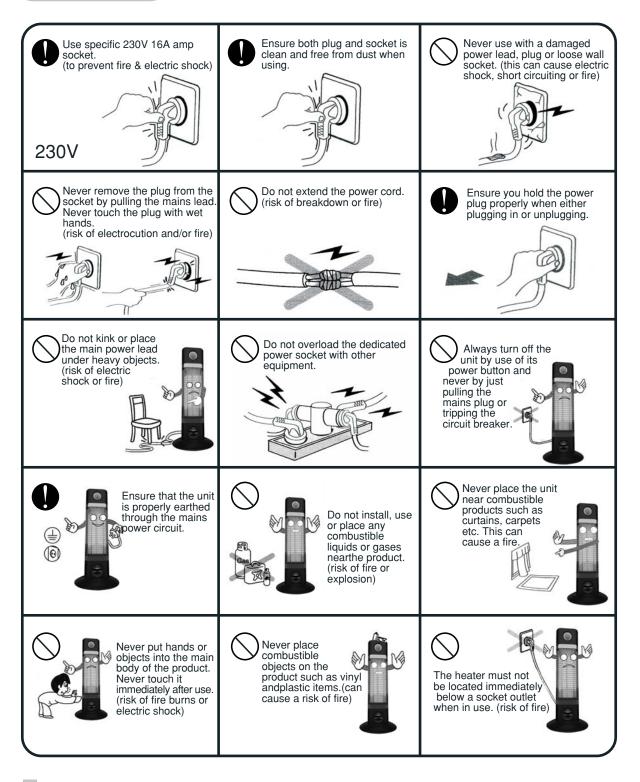

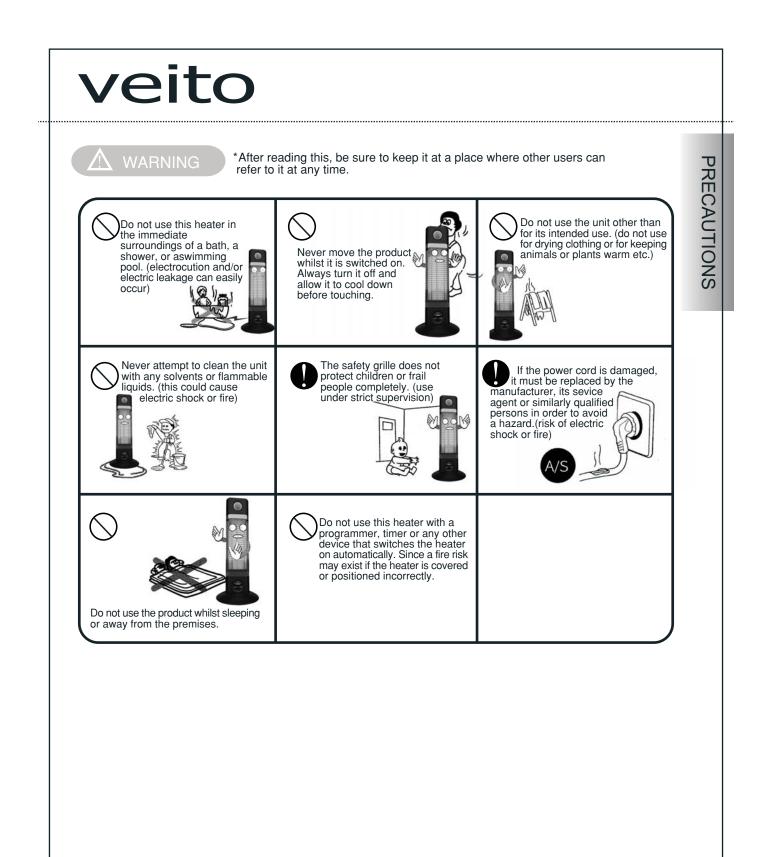


- 5

▲ CAUTION

*After reading this, be sure to keep it at a place where other users can refer to it at any time.


.....

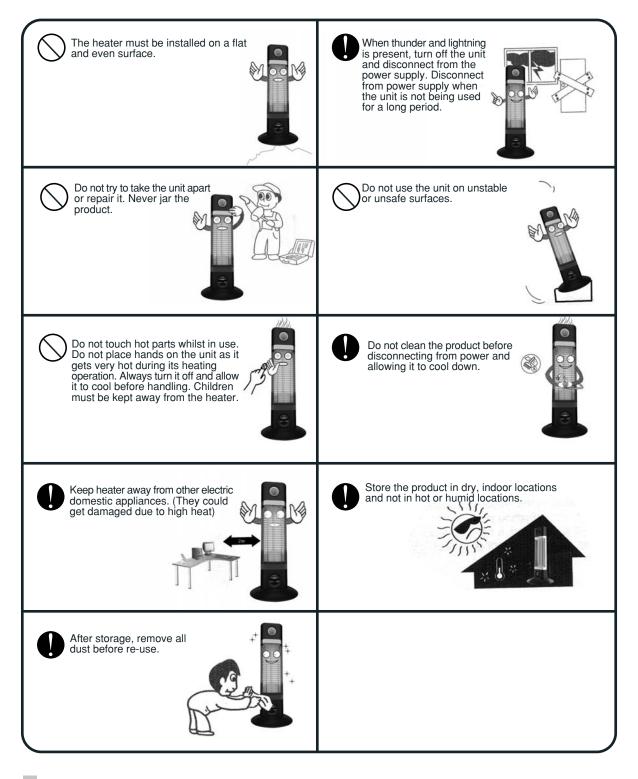

Precautions for installation and before use


PRECAUTIONS FOR INSTALL

*After reading this, be sure to keep it at a place where other users can refer to it at any time.

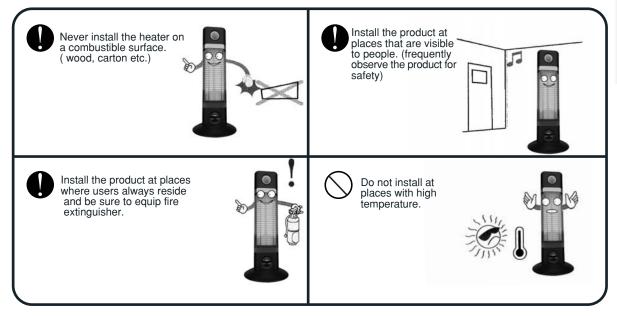

HOW TO INSTAL

*Keep packaking parts because they are necessary in maintaining the heater for a long time.

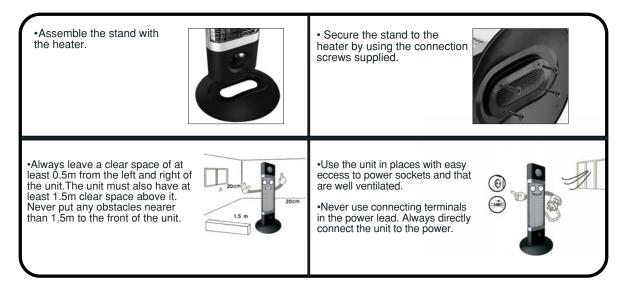




HOW TO USE POWEF

• When using 230V •Put plug into specific outlet for 230V with earth terminal.




Configuration and Name

MAIN BODY

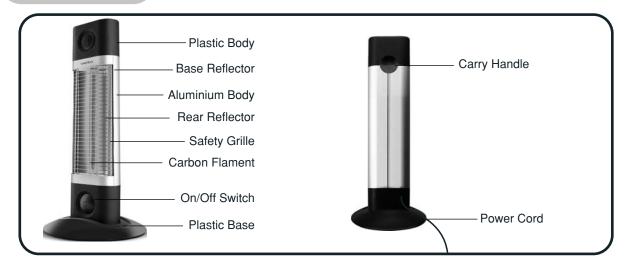


•External appearence can be changed without prior notice for improving quality.

INDICATION AND OPERATION PART

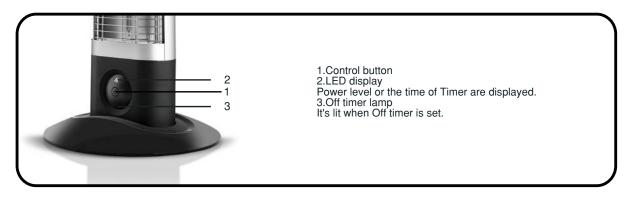

REMOTE CONTROL

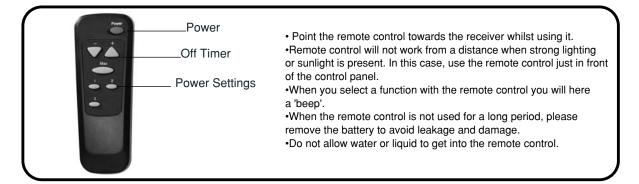

HOW TO OPERATE THE REMOTE CONTROL



 To operate the remote control, first pull out battery cover at the back of the remote control.
 Pack the housing with 2 x AAA batteries in accordance with the instructions and polarity of the batteries.
 Replace the battery cover and push it on a level until it sounds "click ".

How to use


OPERATION AND STOP

It is recommended that persons who may have difficult understanding or operating the appliance controls should not be left unattended while using the appliance. Special considerations should be given to young children and the less able bodied!

- 1.Start operation by pressing power setting button.
- 2. Heater is turned on and operation is started with the sound of beep.
- 3. Press power button to stop.

HEAT AMOUNT CONTROL

Start operation by pressing power setting button.
 By pressing power setting buttons, you can set the heat steps.

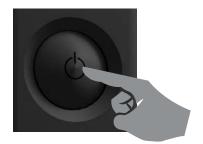

OFF TIMER

When the product is on, push and hold any power setting button until off timer lamp starts flashing, then release.
 Please set the desire time by pushing off timer buttons (1~9hr). After 3sec. The time is set and off timer lamp is on.
 To stop the off timer mode, push and hold any power setting button until off timer lamp starts falshing, then release.
 Set the desire time as '0'. After 3sec. the off timer mode stops and the heater is switched off.

How to Diagnose Safety Device

Veito heater is equippped with diverse safety device, preventing a risk of fire. In the event that heater is not working properly, safety device is operated and heater is automatically stopped.

When the heater is knocked over, it will automatically shut down.

 After checking that there is no damage, switch on again and operate normally.



The unit will automatically stop if there is a power failure. You must press the power setting button to continuou use.



Cleaning and Maintenance

Precautions for examination and handling;

- Handle heater when it is completely cooled down and power is cut off.
- If the heater has collected dust or dirt inside the unit or around the elements, have the unit cleaned by
- a qualified service agent. Do not operate the heater in this condition.
- Do not attempt to open the case of the heater at any time, there are no customer serviceable parts inside. Do not use powerful abrasive or solvent cleaning fluids when cleaning the heater as they may damage the plastic parts. Use only a clean, dry cloth to clean the external surfaces of the heater only.

Storage and Instructions



OF USE


Troubleshooting

This heater was manufactured conscientiously and checked several times before delivery. If you experience a malfunction, please try to rectify the fault yourself first with the help of this table. In doing do, you will avoid the unnecessary expense of customer service assistance. If a foult in your heater can not be rectified with the aid of this table, please contact the Central Customer Service Department.

Repairs must only be carried out by authorized professionals.

Syptoms	How to deal with
 Is electric supply working? Check that the power plug is plugged in. Is the circuit breaker off? 	 Check the main power supply is working. Turn on the product once again after plugging in. Reset circuit breaker.

Wiring Diagram

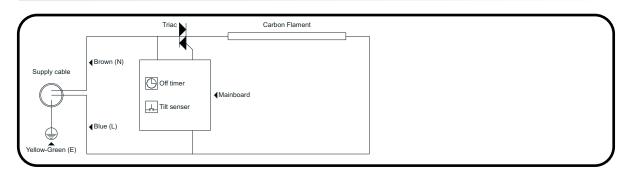

Specification

classification model	CH1200 RT	
Heating Capacity BTU/h	6000	
Maximum Power (W)	1200	
Space for use (m ²)	15	
Power supply	230V 50/60Hz	
Size(mm) (WxLxH)	300x300x700	
Product weight (kg)	2.0	
Safety device	Tilt sensor equipped	
Controlling method	Push button control and remote control	
Controlling function	4 power settings, off timer	



WARRANTY

(Applicable to first retail purchaser only)

Veito Carbon Infrared Heater give more reliable performance, comfort and durability the more they are used. They are built under a strict quality assurance regime which includes inspection both during and after production and exhaustive reliability testing.

In the unlikely event you have any problems, please contact your dealer or distributor. If the problem is as a result of a production fault or failure, repairs will be undertaken free of charge during the period of warranty subject to the following warranty conditions:

1. The warranty period is 12 months from the date of first purchase.

2. If the problem has been caused by customer error or misuse, abuse or damage, then all repairs will be charged for.

3. This warranty card is valid within your country.

4. Proof and date of purchase must be supplied.

5. Please complete the details below and keep this warranty in a safe place.

6.All transport charges back to the dealer are at the customers cost. Keep all original packaging to facilitate return. Return to customer will be at dealers cost

DESCRIPTION		CARBON INFRARED HEATER			
MODEL		CH1200 RT			
DATE OF PURCHASE			PRODUCT SERIAL NO:		
Warranty Period		() Months			
DISTRIBUTOR	Nam	e of Company			
	Tele	phone No.			
		Name:			
CUSTOMER DETAILS		Address:			
		Telephone:			

Notes			

