CARBON INFRARED HEATER CH1800 RE

User's Manual

 


- Thank you for purchasing Veito Carbon Infrared Heater. Please read the instructions Thank you for purchasing veito Carbon infrared Reater. Please read the instructions thoroughly before using your heater.
 After reading the instructions, please keep it in a place accessible to all users.
 Ensure you read 'Safety Precautions' in advence and use the product corectly.
 We can not be liable for any damages caused by failure to observe these instructions.
 The product is specified for use with a power supply of 230V 50/60Hz

- This manual includes the product warrantly.
 Specifications and contents of this manual may be changed without prior notice, in accordance with our commitment to product quality, design and control.

CONTENTS

■ Safety Precautions
•Main body 8 •Indication and operation part 8
•Remote control
How to use 9 •Operation and stop 9 •Heat amount control 9
•Off timer
Cleaning and maintenance 10 Storage Instructions 10
Troubleshooting 11 Wiring diagram 11
Specification 11 Product warranty 12



These precautions are designed for keeping users safe and preventing material damage. Be sure to read them and use the product correctly.

• There are 3 classifications of safety precautions and they are listed in the box below.



Possiblity of death or severe injury in the event of mishandling.



Possiblity of death or severe injury in the event of mishandling.



Possiblity of injury and/or material damage in the event of mishandling.

*Meaning of picture signs






Indicate contents that people must carry out




 * After reading this, be sure to keep it at a place where other users can refer to it at any time.

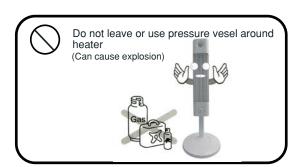




*After reading this, be sure to keep it at a place where other users can refer to it at any time.

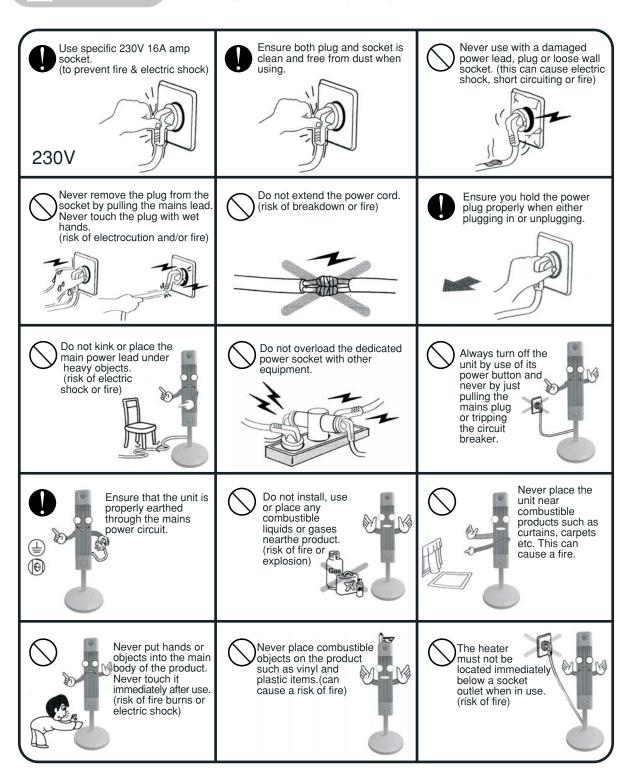




*After reading this, be sure to keep it at a place where other users can refer to it at any time.

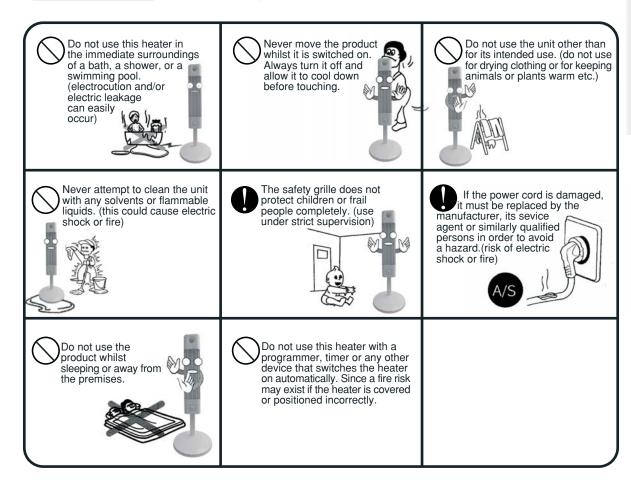



*After reading this, be sure to keep it at a place where other users can refer to it at any time.

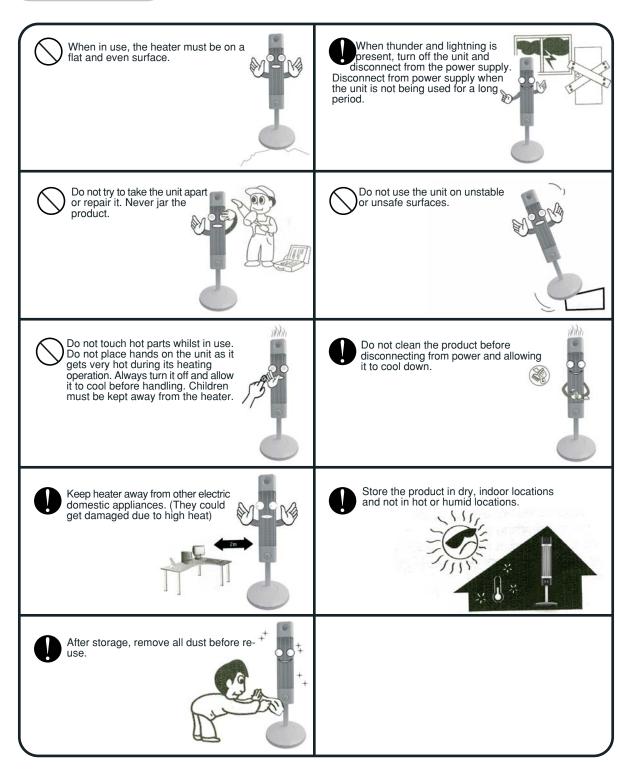




Precautions for installation and before use

PRECAUTIONS FOR INSTALL

*After reading this, be sure to keep it at a place where other users can refer to it at any time.



Install the product at places that are visible to people. (frequently observe the product for safety)

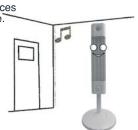

0

Install the product at places where users always reside and be sure to equip fire extinguisher.



Do not install at places with high temperature.



HOW TO INSTALL

*Keep packaking parts because they are necessary in maintaining the heater for a long time.

 Assemble the two parts of the base.



•Place the aluminium profile into the place on the base and push it on a level until it sounds 'click'.



 
Insert the plastic connection part onto the aluminium profile.



Assemble the product stand with the product. Tighten the connection nut adequately as to secure the heater in position. You will re-adjust this height later.



•Always leave a clear space of at least 0.5m from the left and right of the unit. The unit must also have at least 1.8m clear space above it. Never put any obstacles nearer than 1.8m to the front of the heater. The unit must be installed at least 1.8m height from the floor.



- Use the unit in places with easy eccess to power sockets and that are well ventilated.
- •Never use connecting terminals in the power lead. Always directly connect the unit to the power.




- When using 230V Put plug into specific outlet for 230V with earth terminal.







Configuration and Name

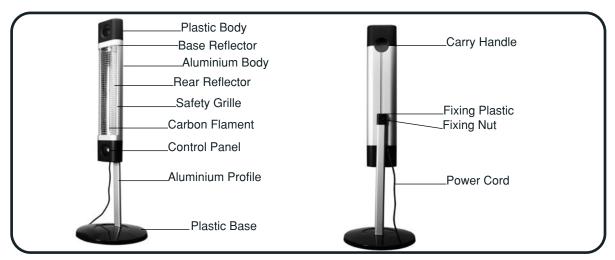

•External appearence can be changed without prior notice for improving quality.

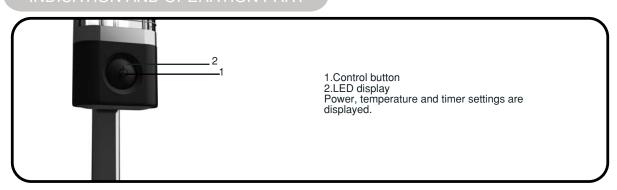

REMOTE CONTROL

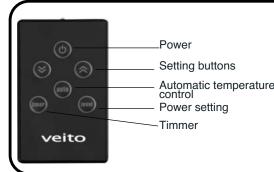

- Point the remote control towards the receiver whilst using it.
- •Remote control will not work from a distance when strong lighting or sunlight is present. In this case, use the remote control just in front of the control panel.
- Automatic temperature •When you select a function with the remote control you will here control a 'been' a 'beep'.
 - •When the remote control is not used for a long period, please remove the battery to avoid leakage and damage.
 - •Do not allow water or liquid to get into the remote control.

HOW TO REPLACE THE REMOTE CONTROL BATTERY



- The remote control uses a CR2025 lithium 3.0 V coin battery that is
- commonly used in small electronic devices.

 Push the battery compartment release button and then slide out the battery tray on the bottom of the remote control.
- •Remove the old battery and put the new battery in, making sure that the battery's positive side is facing up.
- Slide the battery tray back into the remote control until it clicks.

How to use

OPERATION AND STOP


It is recommended that persons who may have difficult understanding or operating the appliance controls should not be left unattended while using the appliance. Special considerations should be given to young children and the less able

- 1. Start operation by pressing the setting or the auto button.
- 2. Heater is turned on and operation is started with the sound of beep.
- 3. Press power button to stop.

HEAT AMOUNT CONTROL

- 1- Start the operation by pressing the setting or the auto button.
- 2- When you press the auto button, you can set the temperature by using the setting buttons;
- Electronic temperature control automatically regulates power consumption based on your set temperature and eliminates annoying hot and cold cycles.

 3- When you press the level button, you can set the heat steps by using the
- setting buttons: Heating capacity can be set to 4 different levels 900W-1200W-1500W-1800W.

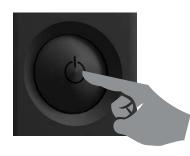

OFF TIMER

- When you press the timer button, you can set the off timer between 1-9 hours by using the setting buttons;
- When the timer is set, off timer lamp will light up and the heater will automatically shut down at the end of the determined time.
- To stop the off timer, set the timer as "0" or restart the heater.



How to Diagnose Safety Device

Veito heater is equippped with diverse safety device, preventing a risk of fire. In the event that heater is not working properly, safety device is operated and heater is automatically stopped.

When the heater is knocked over, it

- will automatically shut down.

 After checking that there is no damage, switch on again and operate normally.
- If the heater exceeds temperature requirements, it will automatically switch itself off.



The unit will automatically stop if there is a power failure. You must press the power setting button to continuou use.






Cleaning and Maintenance


Precautions for examination and handling;

- Handle heater when it is completely cooled down and power is cut off.
- If the heater has collected dust or dirt inside the unit or around the elements, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
- Do not attempt to open the case of the heater at any time, there are no customer serviceable parts inside.
- Do not use powerful abrasive or solvent cleaning fluids when cleaning the heater as they may damage the plastic parts. Use only a clean, dry cloth to clean the external surfaces of the heater only.




Storage and Instructions

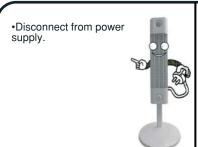

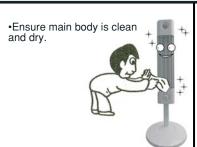

 ·Cover the heater with the covering supplied when you purchased the unit. Keep it in a well ventilated dry place.





Troubleshooting


This heater was manufactured conscientiously and checked several times before delivery. If you experience a malfunction, please try to rectify the fault yourself first with the help of this table. In doing do, you will avoid the unnecessary expense of customer service assistance. If a foult in your heater can not be rectified with the aid of this table, please contact the Central Customer Service Department.

Repairs must only be carried out by authorized professionals.

	Syptoms	How to deal with	
Unit is not working	Is electric supply working?Check that the power plug is plugged in.Is the circuit breaker off?	 Check the main power supply is working. Turn on the product once again after plugging in. Reset circuit breaker. 	



Wiring Diagram

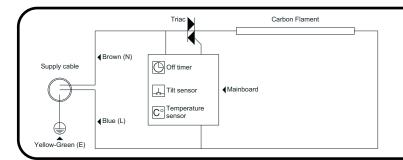



Specification

classification	CH1800 RE	
Heating Capacity BTU/h	8000	
Maximum Power (W)	1800	
Space for use (m²)	20	
Power supply	230V 50/60Hz	
Size(mm) (WxLxH)	400x400x1350	
Product weight (kg)	2.8	
Safety device	Tilt sensor, overheat protection	
Controlling method	Push button and remote control	
Controlling function	Automatic temperature control, 4 power settings, off timer	

WARRANTY

(Applicable to first retail purchaser only)

Veito Carbon Infrared Heater give more reliable performance, comfort and durability the more they are used. They are built under a strict quality assurance regime which includes inspection both during and after production and exhaustive reliability testing.

In the unlikely event you have any problems, please contact your dealer or distributor. If the problem is as a result of a production fault or failure, repairs will be undertaken free of charge during the period of warranty subject to the following warranty conditions:

- 1. The warranty period is 12 months from the date of first purchase.
- 2.If the problem has been caused by customer error or misuse, abuse or damage, then all repairs will be charged for.
- 3. This warranty card is valid within your country.
- 4. Proof and date of purchase must be supplied.
- 5. Please complete the details below and keep this warranty in a safe place.
- 6.All transport charges back to the dealer are at the customers cost. Keep all original packaging to facilitate return. Return to customer will be at dealers cost

DESCRIPTION		CARBON INFRARED HEATER		
MODEL		CH1800 RE		
DATE OF PURCHASE		PRODUCT SERIAL NO:		
Warranty Period		() Months		
DISTRIBUTOR	Name of Company			
	Telephone No.			
		_		
		Name:		
CUSTOMER DETAILS		Address:		
		Telephone:		

Notes

www.veito.com

veito